


## Deploying Downstream Security Fabric:


Downstream FortiGate units can be securely added to the Security Fabric without sharing the password of the root FortiGate. Downstream unit serial numbers can be authorized from the root FortiGate, or allowed to join by request.

### Security Fabric Configuration:


Go to **Security Fabric > Fabric Connectors** and double-click the **Security Fabric Setup** card.

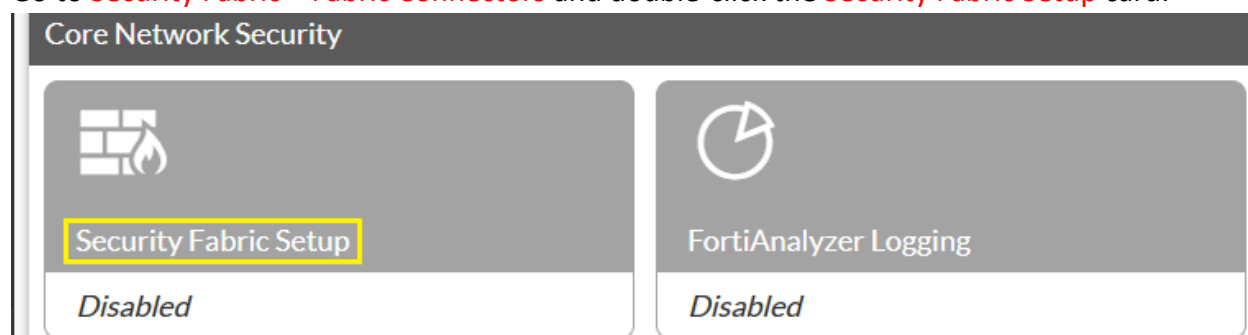

For Status, select **Enabled**. Set the Security Fabric role to **Join Existing Fabric**. Enter the IP address of the root FortiGate in the Upstream FortiGate IP field in this case **192.168.100.200**. Select **OK**.

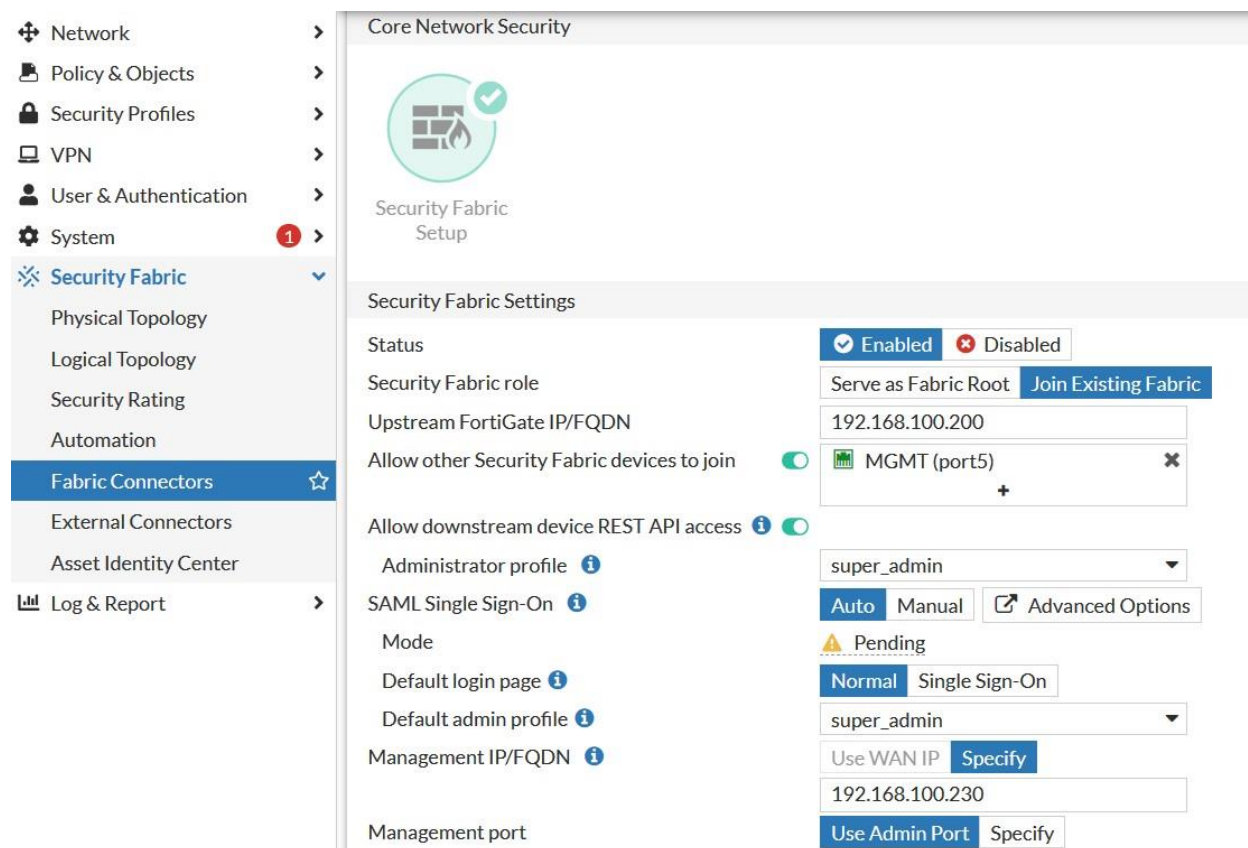

It will show below warning just click confirm.

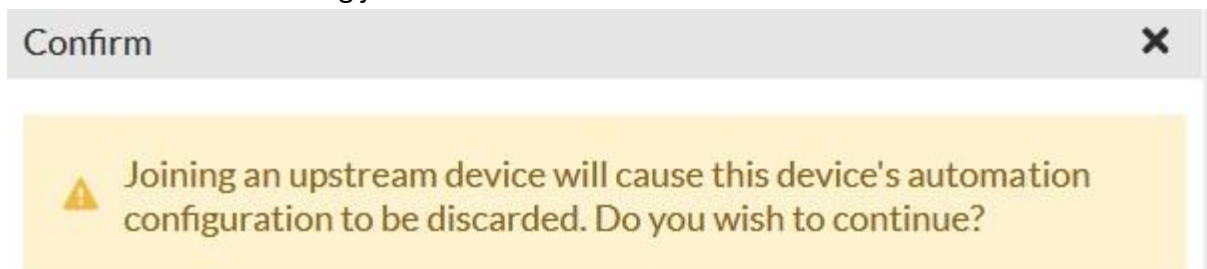


#### Root FortiGate Authorization:

Connect to the root FortiGate and go to **Security Fabric -> Fabric Connectors**. The new FortiGate appears in the topology tree as unauthorized. Select the unauthorized unit & select **Authorize**.



It will open a wizard just click Authorize to complete.

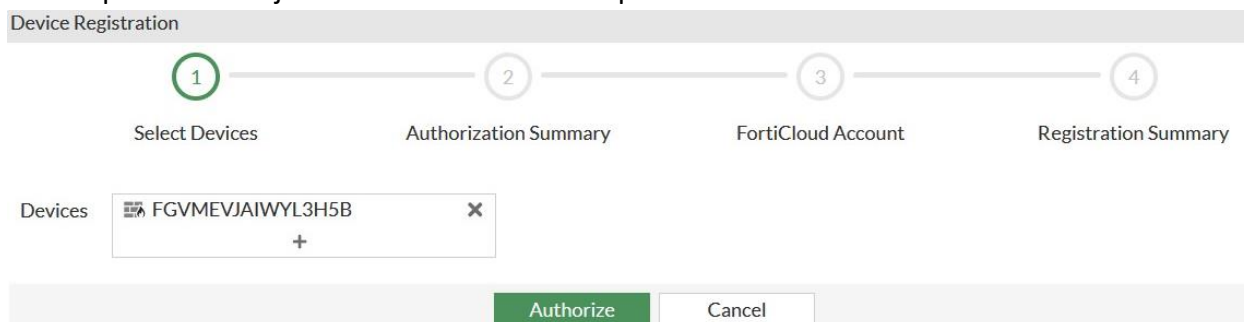

Device Registration

## FortiAnalyzer Authorization:

Login to FortiAnalyzer in the root ADOM, go to **Device Manager** and click **Unregistered Devices** in the quick status bar. The content pane displays the unregistered devices.

Device Manager
Add Device
Dev
ADOM: root

Device & Groups

Return
Authorize

FortiAnalyzer VM requires minimum 8GB Memory and 4x vCPU.
1 unauthorized device(s).

Search...

All Logging Devices
Unauthorized Devices

Device Name

HQ-FW

Select the unregistered device or devices, then click **Authorize**.

Device Manager
Add Device
Device Group

Device & Groups

Return
Authorize
Hide
Delete
Display Hidden Devices

Search...

All Logging Devices
Unauthorized Devices

Device Name
Model
Serial Number
Connecting IP

BR-FW
FortiGate-VM64
FGVMEVNERNRJD6KE6E
192.168.114.230

Select the ADOM in the **Add the following device(s) to ADOM** list. Click **OK** to register the device or devices. The device or devices are added and FortiAnalyzer can start receiving logs from the device or devices.

## Authorize Device

Add the following device(s) to ADOM:
FG-7-0-9 (FortiGate 7.2)

Device Name

Assign New Device Name

BR-FW

BR-FW

OK
Cancel

The device is successfully authorized click **Closed**.

## Authorize Device



Device Authorization

100%

[View Details](#)

Double click or select Edit type the Admin User and Password in this case **admin/123**

Admin User


admin

Password

••••••••

### Verification:

Finally, FortiAnalyzer Logging and Security Fabric Setup has been completed. Make sure FortiAnalyzer Logging is green up arrow.

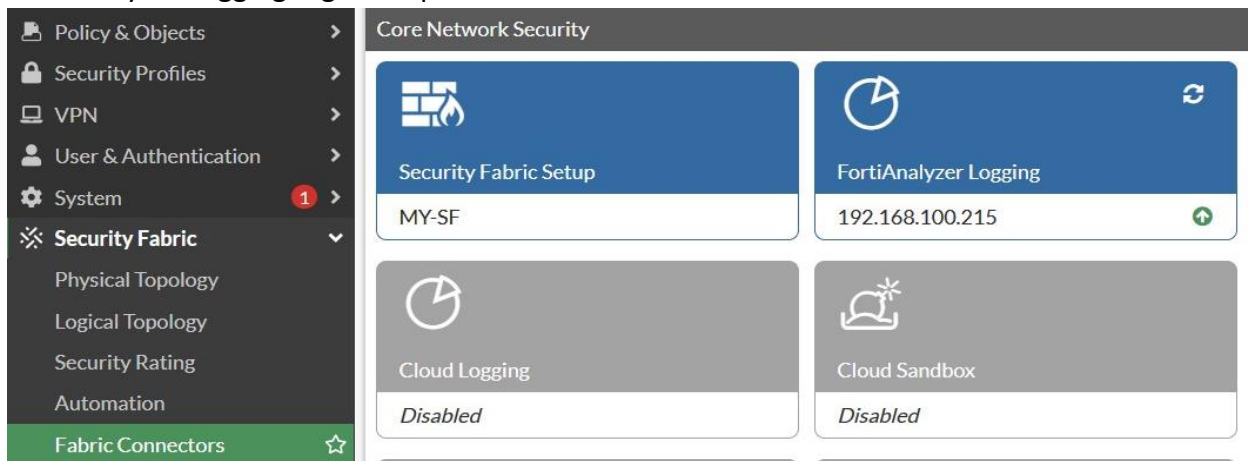

To verify navigate to **Dashboard>Status** Security Fabric Widget.

